

# The TWILIGHT ZONE



Please retain these instructions for future reference.


## Talking Feature

- 1 Turn lower metallic colored key on Talky Tina's back to switch her on and off. The top black key is decorative and does not function.
- 2 Squeeze Talky Tina's belly to activate the talking feature.



## Battery Replacement

- 1 Open the dress on the back. Open the body and pull out the voice pack.
- 2 Unscrew the battery case lid using a small Phillips/cross head screwdriver (not included). Remove lid.
- 3 Replace with three 1.5V (LR44/AG13 size) batteries. Reattach lid, tighten screw, and enclose back into the doll.

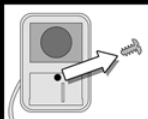

TM & © 2011 CBS Broadcasting Inc. TWILIGHT ZONE and related marks are trademarks of CBS Broadcasting Inc. All Rights Reserved. TELEVISION CITY TM & © 2011 CBS Broadcasting Inc. and its related companies. All Rights Reserved. © 2011 Bif Bang Pow! (bifbangpow.com) - a unit of JLA Direct, LLC. 12730 Raymer Street Suite #1, North Hollywood, CA 91605-2925, USA. 1-877-BIF-BANG. Product and colors may vary. All Rights Reserved. Printed in Shenzhen, China for Bif Bang Pow! Please keep all the relevant information for future reference.

**BATTERIES INCLUDED**

**3 x 1.5V (LR44/AG13 size)**