




## PORTABLE & RECHARGEABLE MINI WIRELESS SPEAKER

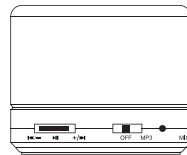


### USER GUIDE

© 2015 KISS Catalog, LTD. UNDER LICENCE TO EPIC RIGHTS.  
Bif Bang Pow! CHINA  
BBP29100, Rev1 05/15

## A. CONTENTS

Included:

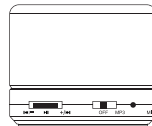

Mini Wireless Speaker



Multifunction Cable


## B. FEATURES

- Micro TF Card Mode**  
Insert a Micro TF card to play music. The built-in TF smart decoder allows you to listen to MP3 music stored on the TF card.
- AUX/MP3 Mode**  
It's easy to listen to music from your PC, smart phone, and MP3 player while in AUX/MP3 mode.
- Wireless Mode**  
Works with your Bluetooth (A2DP/AVRCP) capable device for easy wireless listening.

### Technical Specifications

Battery Voltage: 3.7V	Capacity: 450mAh
Charge Voltage: 5V	Loudspeaker Size: 45mm4Ω 3W
Net Weight: 270G	S/N: ≥ 95Db
Distortion: ≤ 0.5%	Size: 60*60*50mm

## C. FUNCTIONALITY

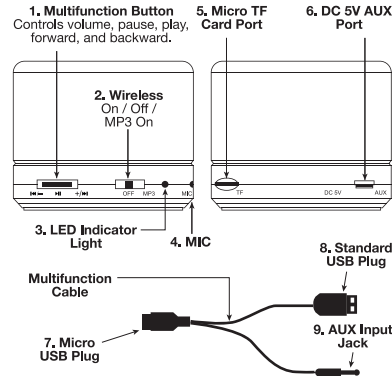

## D. PAIRING BLUETOOTH DEVICE TO SPEAKER

1. Make sure the mini wireless speaker is in the Off state (C2). See section C for button locations.
2. Switch Off button left to Wireless mode (C2), a blue LED light (C3) will come on and a voice prompt will say "Sync Your Bluetooth."
3. Follow the operating instructions of your Bluetooth capable device for precise pairing. Typically, this is done by going to "Settings", "Set Up", "Connect" or "Bluetooth" menu and then selecting the option to search devices.
4. Your Bluetooth capable device should recognize this wireless speaker as S10. Click this device name to connect. Your device should connect automatically or may ask you to confirm by selecting "Yes".
5. A voice prompt will say "Connected" once you have successfully paired your device to the speaker.
6. The speaker is now ready to play audio from your Bluetooth device.

## E. PLAYING AUDIO VIA AUX/MP3 MODE

1. Switch Off button right to MP3 mode (C2) to listen to audio via the AUX cable. A green LED light (C3) will come on and a voice prompt will say "AUX Mode." See section C for button locations.
  2. Connect the micro USB plug (C7) into the DC 5V AUX port on the speaker (C6).
  3. Connect the 3.5 mm input jack (C9) into the line-out jack on your Bluetooth device.
  4. Use the Volume +/- buttons (C1) to adjust volume. You may wish to adjust the volume on your audio device, too. See section G for how to use speaker controls.
- NOTE: The "forward" and "back" buttons will not work in this mode. Please use your Bluetooth device to change songs.**