F. PLAYING AUDIO VIA MICRO TF CARD	G. SPEAKER CONTROLS USING MULTIFUNCTION BUTTON	H. CHARGING THE SPEAKER	I. LED INDICATOR LIGHT	J. IMPORTANT SAFETY INSTRUCTIONS	K. TROUBLESHOOTING
Switch Off button right to MP3 mode (C2) to listen to audio with a micro TF card. A green LED light (C3) will come on and a voice prompt will say"AUX Mode." See section C for button locations. Insert your micro TF card into the micro TF card port (C5). A voice prompt will say "TF Card Mode" once the card has been inserted correctly. Your music will start playing right away. Use the Multifunction Button (C1) to adjust volume, pause, move forward or back. See section G for how to use speaker controls.	1. Increasing Volume - A long press of the Multifunction Button (C1) to the right towards the (+) will increase the volume. 2. Decreasing Volume - A long press of the Multifunction Button (C1) to the left towards the (-) will decrease the volume. 3. Move Forward to Next Song - In TF/Wireless mode only a short press of the Multifunction Button (C1) to the right will go to the next song. This function will not work in AUX/MP3 mode. 4. Move Back - In TF/Wireless mode only a short press of the Multifunction Button (C1) to the left will go back to the previous song. This function will not work in AUX/MP3 mode. 5. Pausing - In TF/Wireless mode a short press of the Multifunction Button (C1) in the center will pause the song. Another short press of the Multifunction Button (C1) in the center will resume the song.	1. Connect the micro USB plug (C7) into the DC 5V AUX port (C6) on the speaker. 2. Connect the standard USB plug end (C8) to a power USB port on a computer or other USB charging device. 3. The red LED indicator light illuminates while the speaker is charging. No red light indicates the speaker is fully charged.	1. Blue LED Flashing: Will flash while device is pairing and once device is successfully paired with speaker. 2. Green LED Flashing: Speaker is in AUX/MP3 mode or TF Card mode. 3. Red LED Flashing: Battery is low. 4. Red LED Solid: Battery is charging. 5. Red LED Off: Battery is full.	1. Read all instructions and safety information before using this product. 2. Keep out of reach of children. 3. Do not expose the speaker to liquid, moisture, or areas of high humidity. 4. Do not expose the speaker to extreme high or low temperatures. 5. Keep away from direct sunlight and exposed flames like lighted candles. 6. Store the speaker in a cool dry place. 7. Only use the accessories and attachments as supplied and designated in the user guide. 8. Do not attempt to open or modify the speaker in any way. 9. Always dispose of the packaging and unit in accordance with the local regulations and in a responsible manner. 10. Avoid severe physical shocks to the speaker (do not drop). 11. Do not use abrasive cleaners to clean the speaker as this may result in damage to the unit. If necessary, wipe it dean with a soft cloth. Always unplug and power off the unit before cleaning. 12. This device uses an internal rechargeable lithium-ion battery and may present a risk of fire, explosion, or chemical burn if mistreated.	1. If your Bluetooth device doesn't pair: a. Check to make sure the speaker is properly charged. b. Check to make sure your Bluetooth device is in the "On" position. C. Make sure your device is working properly. Check your device's user guide for details on Bluetooth pairing and linking. 2. If Blue indicator light doesn't come on: a. Check to make sure the speaker is properly charged. 3. No volume: a. Make sure your Bluetooth device isn't set to mute or the sound volume is turned off/low. 4. If a green light appears instead of a blue light when pairing your Bluetooth device in wireless mode this means the signal is weak between your device and the speaker. a. Make sure your Bluetooth device is near the speaker and the light should turn blue denoting the your device is ready to be paired. For further information or to see the latest instructions, visit bifbangpow.com.